











 



 

































 





















| Originale   |           | Sostituto   |                  | Originale   |          | Sostituto   |                       |
|---|-----------|---|------------------|---|----------|---|-----------------------|
|    | Power     |    | Power            |    | Vol +    |    | Vol+                  |
|    | Mute      |    | Mute / Dimmer    |    | MTS      |    | Audio / Lang I/II     |
|    | 1         |    | 1                |    | CH +     |    | CH+ / Page+           |
|    | 2         |    | 2                |    | Vol -    |    | Vol-                  |
|    | 3         |    | 3                |    | REC List |    | Smart / List          |
|    | 4         |    | 4                |    | CH -     |    | CH- / Page-           |
|    | 5         |    | 5                |    | FAV List |    | Fav / Marker / PC     |
|    | 6         |    | 6                |    | REC      |    | Rec / Rec Mode        |
|    | 7         |    | 7                |    | Freeze   |    | Pause / Step / Freeze |
|   | 8         |   | 8                |   | Menu     |   | Menu / Home           |
|  | 9         |  | 9                |  | Up       |  | Up                    |
|  | DTV / ATV |  | D.Menu / Top     |  | Source   |  | AV / Input / RDS      |
|  | 0         |  | 0                |  | Left     |  | Left                  |
|  | Recall    |  | Back / Return    |  | Enter    |  | OK                    |
|  | P.Mode    |  | Picture / Format |  | Right    |  | Right                 |
|  | S.Mode    |  | Sound / Title    |  | Exit     |  | Exit / Cancel / Clear |
|  | Sleep     |  | Sleep / Timer    |  | Down     |  | Down                  |





| Originale              | Sostituto                   |
|------------------------|-----------------------------|
| Display                | Display / Media             |
| Red                    | Red / Netflix / Search      |
| Green                  | Green / APP / Repeat        |
| Yellow                 | Yellow / YouTube / Repeat   |
| Blue                   | Blue / Prime Video / Random |
| << / Guide             | << / Tune-                  |
| << / Guide             | Guide / EPG / -/--          |
| Play/Pause / Timeshift | Play / Slow                 |
| >> / Aspect            | >> / Tune+                  |
| << / Cancel            | << / Preset-                |
| >>  / Subpage          | >>  / Preset+               |
| Stop / Index           | Info / Angle                |
| Stop / Index           | Stop / Hold                 |
| TV / Radio             | TV/Radio /                  |
| Subtitle               | Subtitle / EQ               |
| Reveal                 | Setup / OPT /               |
| Size                   | Zoom / Size                 |

| Originale | Sostituto         |
|-----------|-------------------|
| Hold      | +  Shift + Stop / |
| Text      | Text / Goto       |

