



 

 























Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Nicam/A2	 Audio / Lang I/II
 Aspect	 Shift + Picture / Format
 PMode	 Picture / Format
 SMode	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0	 0

Originale	Sostituto
 Recall	 Back / Return
 Display	 Display / Media
 Freeze	 Shift + Pause / Step /
 Auto/Goto	 Shift + Text /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear





Originale	Sostituto
 CH+ CH	 CH+ / Page+ CH PAGE
 Media MEDIA	 Shift + Display / Media SHIFT + MEDIA DISPLAY
 Vol+ VOL	 Vol+ VOL
 CH- CH	 CH- / Page- CH PAGE
 Text TEXT	 Text / Goto GOTO TEXT
 Vol- VOL	 Vol- VOL
 Hold HOLD	 Shift + Stop / SHIFT + HOLD
 Reveal REVEAL	 Setup / OPT / OPT-TOOLS SETUP
 Size SIZE	 Zoom / Size SIZE ZOOM
 Index INDEX	 Smart / List LIBT SMART
 S.Title S.TITLE	 Subtitle / EQ EQ SUBTITLE
 S.Page S.PAGE	 Eject / Surround SURROUND
 Play PLAY	 Play / Slow SLOW
 Pause PAUSE	 Pause / Step / Freeze STEP-FREEZE
 FAV FAV	 Fav / Marker / PC PC FAV MARKER
 << FAV	 << / Tune- TUNE-
 >> TUNE+	 >> / Tune+ TUNE+

Originale	Sostituto
 Stop STOP	 Stop / Hold HOLD
 I<< TUNE-	 I<< / Preset- PRESET-
 >>I TUNE+	 >>I / Preset+ PRESET+

