












 

















Originale	Sostituto	Originale	Sostituto
On/Off	 Power		
Mute	 Mute / Dimmer		
Menu Up	 Up		
Menu Left	 Left		
Menu Right	 Right		
Menu Down	 Down		
Volume+	 Vol+		
Chan.Up	 CH+ / Page+		
Volume-	 Vol-		
Chan.Down	 CH- / Page-		



Originale	Sostituto	Originale	Sostituto
Power ON/Off	 Power	Tape 1 Rew	 I<< / Preset-
Mute	 Mute / Dimmer	Tape 1 Play	 OK
Tape 1 Stop	 Stop / Hold	Tape 1 F.FWD	 >>I / Preset+
Tape 2 Pre./eq	 D.Menu / Top		
Input/Source	 AV / Input / RDS		
CD/Theater	 Menu / Home		
CD Play	 Play / Slow		
CD F.FWD	 >> / Tune+		
CD Pause	 Pause / Step / Freeze		
CD Rewind	 << / Tune-		
Funct./Direct	 Exit / Cancel / Clear		
Volume+	 Vol+		
Next/Prog+	 CH+ / Page+		
Volume-	 Vol-		
Tape 1 Hall/Ats	 Display / Media		
Prev./Prog-	 CH- / Page-		
Program	 TV/Radio /		

