 



 

 
 
 
 
 
 
 

 
 






 

 

 

 
 
 

 





Originale	Sostituto
 DVD / TV / AV	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Mute	 Mute
 Repeat / TV/Radio	 TV/R
 Repeat / TV/Radio	 Shift + Text
 Exit	 Exit
 Up / CH+	 Up
 Up / CH+	 Ch +

Originale	Sostituto
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 Pg Up	 Shift + Ch +
 Pg Dn	 Shift + Ch -
 Title	 Smart
 Info	 Info
 Goto / FAV	 Pre Ch
 Audio	 Dual
 Sub-T	 Subt
 Zoom / TTX	 Text
 Zoom / TTX	 Eject
 Setup	 Options





Originale		Sostituto		Originale	Sostituto
	Menu / EPG		Menu		
	Menu / EPG		Guide		
	USB		Media		
	Play / Pause		Play		
	Play / Pause		Pause		
	Stop		Stop		
	Copy/Delete / Rec		Rec		
	Red / <<		Red		
	Red / <<		<<		
	Green / >>		Green		
	Green / >>		>>		
	Yellow / I<<		Yellow		
	Yellow / I<<		I<<		
	Blue / >>I		>>I		
	Blue / >>I		Blue		

