







 


 



 

 

 



 
 
 
 

 



 

 
 
 
 
 


 


 
 

 

 



 

 
 


 






 
 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 P+	 Ch +
 Source	 AV	 P-	 Ch -
 1	 1	 i	 Info
 2	 2	 Menu	 Menu
 3	 3	 Q.Menu	 D. Menu
 4	 4	 Back	 Back
 5	 5	 Exit	 Exit
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 OK	 Ok
 Tv	 TV/R	 World	 Media
 Recall	 Pre Ch	 Music-Photo-Vide	 Options
 Vol+	 Vol +	 Guide	 Guide
 Vol-	 Vol -	 */o	 Format
 Mute	 Mute	 */Q	 3D

Originale	Sostituto	Originale	Sostituto
 P+	 Ch +	 TV	 AUX
 P-	 Ch -	 DVD	 SAT
 i	 Info	 SOUND	 AD
 Menu	 Menu	 SUBT	 OPT
 Q.Menu	 D. Menu	 PICTURE	 ECO
 Back	 Back	 FORMAT	 3D
 Exit	 Exit	 REPEAT	 TIMER
 Up	 Up	 ZOOM	 AV
 Down	 Down	 D.MENU	 TEXT
 Right	 Right	 RETURN	 BACK
 Left	 Left	 CLEAR	 EXIT
 OK	 Ok	 MENU	 INFO
 World	 Media	 OK	 BACK
 Music-Photo-Vide	 Options	 HOME	 SMART
 Guide	 Guide	 APP	 CH -
 */o	 Format	 MEDIA	 CH +
 */Q	 3D	 SETTINGS	 OPT





Originale		Sostituto		Originale		Sostituto	
	Text		Text				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Lang.		Dual				
	[≡]..		Subt				
	[-o-]		Smart				
	<<		<<				
	Pause		Pause				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

