



Originale		Sostituto		Originale		Sostituto	
	Power		Power		EPG		Guide
	Mute		Mute		TV / STB		Smart
	1		1		Exit		Exit
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Right		Right
	6		6		Down		Down
	7		7		P-		Ch -
	8		8		P+		Ch +
	9		9		Vol-		Vol -
	0 / Zoom		0		Vol+		Vol +
	TV / Radio		TV/R		UHF		AV
	Recall		Back		Red / PIP		Red
	Audio		Dual		Green / Text		Green
	Menu		Menu		Green / Text		Text
	i		Info		Yellow / Subtitle		Yellow



