 


 
 
 

 

 


 
 


 



 

 

 


 
 
 


 
 


 




 
 
 
 



 



 











 







Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up	 Up
 Guide	 Guide	 Down	 Down
 []/Ratio	 Subt	 Right	 Right
 Info	 Info	 Left	 Left
 Input	 AV	 OK	 Ok
 1	 1	 Settings/List	 Menu
 2	 2	 Back	 Back
 3	 3	 Exit	 Exit
 4	 4	 Q.Menu	 D. Menu
 5	 5	 FAV	 Pre Ch
 6	 6	 Mute	 Mute
 7	 7	 Simplink	 Media
 8	 8	 Q.View	 Options
 9	 9	 Energy/Saving	 3D
 0	 0	 AV Mode	 Format
 --	 List	 Vol+	 Vol +
 TV	 TV/R	 Vol-	 Vol -

Originale	Sostituto	Originale	Sostituto
 MUTE	 MUTE	 TV	 TV
 DVD	 DVD	 DUAL	 DUAL
 SAT	 SAT	 SOUND	 SOUND
 AUX	 AUX	 AD	 AD
 PLAY MODE	 PLAY MODE	 SETTINGS	 SETTINGS
 II	 II	 LIST	 LIST
 ■	 ■	 SUBT	 SUBT
 ■	 ■	 OPT	 OPT
 <<<	 <<<	 PROG	 PROG
 >>>	 >>>	 SEARCH	 SEARCH
 >>>	 >>>	 PICTURE	 PICTURE
 >>>	 >>>	 ECO	 ECO
 SLEEP	 SLEEP	 3D	 3D
 TV/R	 TV/R	 TIMER	 TIMER
 Q.VIEW	 Q.VIEW	 AV	 AV
 LIST	 LIST	 D.MENU	 D.MENU
 TEXT	 TEXT	 MENU	 MENU
 UP	 UP	 INFO	 INFO
 DOWN	 DOWN	OK	OK
LEFT	LEFT	RETURN	RETURN
RIGHT	RIGHT	CLEAR	CLEAR
EXIT	EXIT	BACK	BACK
HOME	HOME	SMART	SMART
VOL+	VOL+	APP	APP
VOL-	VOL-	MEDIA	MEDIA
1	1	CH+	CH+
2	2	CH-	CH-
3	3	1	1
4	4	2	2
5	5	3	3
6	6	4	4
7	7	5	5
8	8	6	6
9	9	7	7
0	0	8	8
GUIDE	GUIDE	9	9
A	A	0	0
B	B	FAV	FAV
C	C	PRE-CH	PRE-CH
D	D	MUTE	MUTE
Mandis SHOP	Mandis SHOP	www.mandis.tv	www.mandis.tv





Originale		Sostituto		Originale		Sostituto	
	CH+		Ch +				
	CH-		Ch -				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Stop		Stop				
	Play		Play				
	Pause		Pause				
	<<		<<				
	>>		>>				

