



Originale	Sostituto	Originale	Sostituto
 TV/PC	 Eject / Surround	 0	 0
 Power	 Power	 Q.View	 Display / Media
 Input	 AV / Input / RDS	 Menu	 Menu / Home
 TV/Radio	 TV/Radio /	 Up	 Up
 Text	 Text / Goto	 Exit	 Exit / Cancel / Clear
 I-II	 Audio / Lang I/II	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Info	 Info / Angle
 3	 3	 Down	 Down
 4	 4	 Guide	 Guide / EPG / -/-
 5	 5	 Vol+	 Vol+
 6	 6	 Return	 Back / Return
 7	 7	 PR+	 CH+ / Page+
 8	 8	 Vol-	 Vol-
 9	 9	 PR-	 CH- / Page-
 List	 Smart / List	 FAV	 Fav / Marker / PC





Originale	Sostituto	Originale	Sostituto
	Red 		
	Green / Netflix / Search 		
	Green / APP / Repeat 		
	Stop / Hold 		
	Yellow / YouTube / Repeat 		
	Play / Slow 		
	Blue / Prime Video / Random 		
	Pause / Step / Freeze 		
	Q.Menu / Top 		
	<< / Tune- 		
	T.OPT / Setup / OPT / 		
	>> / Tune+ 		
	Subtitle / EQ 		
	Mark / Picture / Format		

