



Originale	Sostituto
Open / Close	Eject / Surround
Power	Power
CD / DVD	Shift + 3
CD / DVD	Shift + 2
Band	Smart / List
Band	Shift + 6
AUX	Shift + 7
Mute	Mute / Dimmer
Dimmer	Shift + Mute / Dimmer
Sleep	Sleep / Timer
1	1
2	2
3	3
RDS	AV / Input / RDS
4	4
5	5
6	6

Originale	Sostituto
PTY	Shift + Smart / List
7	7
8	8
9	9
PTY Search	Shift + Display / Media
Repeat	Green / APP / Repeat
0	0
Repeat A-B	Yellow / YouTube / Repeat
Program	TV/Radio /
Clear	Exit / Cancel / Clear
Sound Mode	Sound / Title
Preset+	Shift + >> / Preset+
Preset+	CH+ / Page+
Audio	Audio / Lang I/II
Volume+	Vol+
Preset-	Shift + I<< / Preset-
Preset-	CH- / Page-





Originale	Sostituto
Subtitle	Subtitle / EQ
Volume-	Vol-
Zoom	Zoom / Size
Return	Back / Return
Up	Up
Left	Left
Enter	OK
Right	Right
Menu	Menu / Home
Down	Down
Display	Display / Media
Setup	Setup / OPT /
Stop	Stop / Hold
Pause / Step	Pause / Step / Freeze
Play	Play / Slow
<< / Slow Scan-	<< / Tune-
>> / Slow	>> / Tune+

Originale	Sostituto
I<< / Skip Scan-	I<< / Preset-
>>I / Skip Scan+	>>I / Preset+
Title	Shift + Sound / Title
Marker	Fav / Marker / PC
Search	Red / Netflix / Search
Angle	Info / Angle

