













 









 



 



















 










 





 






Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 FM/AM	 Shift + 6
 CD/DVD	 Shift + 3
 CD/DVD	 Shift + 2
 Video 1	 Shift + 1
 Video 2	 Shift + 4
 Sleep	 Sleep / Timer
 Preset-	 CH- / Page-
 Preset-	 Shift + I<< / Preset-
 Preset+	 CH+ / Page+
 Preset+	 Shift + >>I / Preset+
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5

Originale	Sostituto
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Volume-	 Vol-
 Volume+	 Vol+
 Play	 Play / Slow
 Pause / Step	 Pause / Step / Freeze
 Stop	 Stop / Hold
 I<<< / Skip-	 I<< / Preset-
 >>>I / Skip+	 >>I / Preset+
 Prog	 TV/Radio /
 Repeat	 Green / APP / Repeat
 Test Tone	 Text / Goto
 Sound Mode	 Sound / Title
 By Pass	 Yellow / YouTube / Repeat





Originale	Sostituto
 Up	 Up
 Level	 Picture / Format
 Delay	 D.Menu / Top
 Left	 Left
 Enter	 OK
 Right	 Right
 Display	 Display / Media
 Return	 Back / Return
 Down	 Down
 Set-Up	 Setup / OPT /
 Menu	 Menu / Home
 S-Title	 Subtitle / EQ
 Angle	 Info / Angle
 Audio	 Audio / Lang I/II
 Rev << / Slow/Scanner-	 << / Tune-
 Repeat A-B	 Shift + Yellow / YouTube /
 Zoom	 Zoom / Size

Originale	Sostituto
 Marker	 Fav / Marker / PC
 Title	 Shift + Sound / Title
 Clear	 Exit / Cancel / Clear
 Search	 Red / Netflix / Search
 >> Fwd /	 >> / Tune+

