 

















 






















 













 

 









Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV/CL	 AV / Input / RDS
 Zoom	 Zoom / Size
 [...] / Subtitle	 Subtitle / EQ
 Audio / Language	 Audio / Lang I / II
 ◀ / Camera	 Shift + Info / Angle
 ?	 Setup / OPT /

Originale	Sostituto
 ECO	 Display / Media
 CEC	 Smart / List
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z / Back	 Back / Return
 PR+	 CH+ / Page+
 Up	 Up
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 PR-	 CH- / Page-
 TVG / Top Menu	 Guide / EPG / -/--
 TVG / Top Menu	 D.Menu / Top
 TXT / Menu	 Text / Goto

 

















 


















 



 


 



 


	Originale	Sostituto	Originale	Sostituto
	TXT/Menu	Menu / Home		
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		
	[<>]	Shift + Zoom /		
	Rec/I>	Rec / Rec Mode		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	Stop	Stop / Hold		
	I<	I<< / Preset-		
	>I	>>I / Preset+		
	<<	<< / Tune-		
	>>	>> / Tune+		





Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV/CL	 AV / Input / RDS
 Zoom	 Zoom / Size
 [...] / Subtitle	 Subtitle / EQ
 Audio / Language	 Audio / Lang I/II
 ◀ / Camera	 Shift + Info / Angle
 ?	 Setup / OPT /

Originale	Sostituto
 ECO	 Display / Media
 CEC	 Smart / List
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z/Back	 Back / Return
 PR+	 CH+ / Page+
 Up	 Up
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 PR-	 CH- / Page-
 TVG/Top Menu	 Guide / EPG / -/--
 TVG/Top Menu	 D.Menu / Top
 TXT/Menu	 Menu / Home





Originale	Sostituto
TXT/Menu	Text / Goto
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
[<>]	Shift + Zoom /
Rec/l>	Rec / Rec Mode
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
I<	I<< / Preset-
>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+

Originale	Sostituto





Originale	Sostituto
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	AV / Input / RDS
	Zoom / Size
	Subtitle / EQ
	Audio / Lang I/II
	+ Shift + Info / Angle
	Setup / OPT /

Originale	Sostituto
	Display / Media
	Smart / List
	Mute / Dimmer
	Info / Angle
	Back / Return
	CH+ / Page+
	Up
	Vol-
	Left
	OK
	Right
	Vol+
	Down
	CH- / Page-
	Guide / EPG / -/--
	D.Menu / Top
	Text / Goto



 

















 


















 




 










 

 






Originale	Sostituto
	Menu / Home
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	+ Shift + Zoom /
	Rec / Rec Mode
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	I<< / Preset-
	>>I / Preset+
	<< / Tune-
	>> / Tune+

Originale	Sostituto





Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV/CL	 AV / Input / RDS
 Zoom	 Zoom / Size
 [...] / Subtitle	 Subtitle / EQ
 Audio / Language	 Audio / Lang I / II
 ◀ / Camera	 Shift + Info / Angle
 ?	 Setup / OPT /

Originale	Sostituto
 ECO	 Display / Media
 CEC	 Smart / List
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z / Back	 Back / Return
 PR+	 CH+ / Page+
 Up	 Up
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 PR-	 CH- / Page-
 TVG / Top Menu	 Guide / EPG / -/--
 TVG / Top Menu	 D.Menu / Top
 TXT / Menu	 Text / Goto





Originale	Sostituto
TXT/Menu	Menu / Home
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
[<>]	Shift + Zoom /
Rec/I>	Rec / Rec Mode
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
I<	I<< / Preset-
>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+

Originale	Sostituto

