




























 





 



 







 




Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Nicam/A2	 Shift + Audio / Lang I/II
 Sleep	 Sleep / Timer
 Aspect	 Shift + Picture / Format
 Media	 Shift + Display / Media
 Display	 Display / Media
 Auto	 Smart / List
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 DTV	 D.Menu / Top
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down

Originale	Sostituto
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Recall	 Back / Return
 CH+	 CH+ / Page+
 Info	 Info / Angle
 Audio	 Audio / Lang I/II





Originale		Sostituto		Originale		Sostituto	
	Vol+		Vol+		Stop		Stop / Hold
	CH-		CH- / Page-		Rec/Repeat		Rec / Rec Mode
	FAV		Fav / Marker / PC		Rec/Repeat		Shift + Green / APP /
	Tv/Radio		TV/Radio /		T-Shift		Eject / Surround
	Vol-		Vol-		Red		Red / Netflix / Search
	Text		Text / Goto		Green		Green / APP / Repeat
	EPG		Guide / EPG / -/--		Yellow		Yellow / YouTube / Repeat
	Subtitle		Subtitle / EQ		Cyan		Blue / Prime Video / Random
	Index		Setup / OPT /				
	<</Hold		<< / Tune-				
	<</Hold		Shift + Stop /				
	Size		Zoom / Size				
	>>		>> / Tune+				
	I<</Reveal		I<< / Preset-				
	>>I/Subpage		>>I / Preset+				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				

