




 



 



 

 

 





 














Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Up / CH+	 Up
 Up / CH+	 Ch +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Down / CH-	 Ch -
 Down / CH-	 Down
 Enter	 Ok
 Menu	 Menu
 Red / P.M	 Red
 Red / P.M	 Format
 Green / S.M	 Green
 Green / S.M	 Shift + Dual
 Yellow / FAV	 Yellow

Originale	Sostituto
 Yellow / FAV	 Pre Ch
 Blue / SLP	 Blue
 Zoom	 Eject
 Freeze	 Pause
 Blue / SLP	 Sleep
 DSP / CAPS	 Info
 Recall	 Back
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0





Originale	Sostituto	Originale	Sostituto
	Power		Guide
	Input		AV
	PIP		Smart
	POP		Media
	PIP-POS	+	Shift + Smart
	M.Win		TV/R
	Active-Win	+	Shift + TV/R
	Timer	+	Shift + AV
	Stereo		Dual
	Swap		Exit
	Text		Text
	Text Mix	+	Shift + Text
	Text Hold		Stop
	Text Update		Options
	Text Reveal		Subt
	Text Size	+	Shift + Eject

Originale	Sostituto

