



Originale	Sostituto
 Power	 Power
 Netflix	 Shift + Red / Netflix /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV	 TV/Radio /
 0	 0
 Recall	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+

Originale	Sostituto
 Vol-	 Vol-
 i	 Info / Angle
 PR-	 CH- / Page-
 Menu	 Menu / Home
 Up	 Up
 Q.Menu	 D.Menu / Top
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 EXit	 Exit / Cancel / Clear
 World	 Smart / List
 Camera/Music/Ph	 Display / Media
 Guide	 Guide / EPG / -/--
 */o	 Picture / Format
 Games	 AV / Input / RDS





Originale		Sostituto		Originale		Sostituto	
	[≡]/Text		Text / Goto				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Lang		Audio / Lang I/II				
	[≡]..		Subtitle / EQ				
	[-O-]		Zoom / Size				
	<<		<< / Tune-				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Stop		Stop / Hold				

