
 
 

 
 
 
 
 


 


 


 




Originale	Sostituto
	Mute / Dimmer
	Shift + Pause / Step /
	Audio / Lang I/II
	Power
	Smart / List
	Sleep / Timer
	Picture / Format
	Display / Media
	1
	2
	3
	4
	5
	6
	7
	8
	9

Originale	Sostituto
	AV / Input / RDS
	0
	Back / Return
	Setup / OPT /
	Sound / Title
	Up
	CH+ / Page+
	Vol-
	Left
	Menu / Home
	OK
	Right
	Vol+
	CH- / Page-
	Down
	Text / Goto
	Subtitle / EQ





Originale	Sostituto
[/ =]	TV/Radio /
<< / [...]	<< / Tune-
>> / [?]	>> / Tune+
[X]	Fav / Marker / PC
Red / ↑	Red / Netflix / Search
Green / ←	Green / APP / Repeat
Yellow / →	Yellow / YouTube / Repeat
Blue / Enter / H.Lock	Blue / Prime Video / Random
White / ↓ / CH.List	Guide / EPG / -/--
Pause/Timer	Pause / Step / Freeze
[♦] / Zoom	Zoom / Size
Exit	Exit / Cancel / Clear

Originale	Sostituto

