




 

 



 



 

 

 
 
 

 



 
 


 








 
 
 

 

 


 




















 



Originale	Sostituto	Originale	Sostituto
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PRE-CH		Pre Ch
	CH List		List
	EPG		Guide
	3D		3D
	Vol+		Vol +

Originale	Sostituto	Originale	Sostituto
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Info		Info
	Menu		Menu
	Mute		Mute
	Exit		Exit
	Return		Back
	Media		Media
	Eco		Shift + 3D
	FAV		Shift + Pre Ch
	HiSmart@		Smart
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Originale	Sostituto
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Subt.	 Subt
 Text/Mix	 Text
 P.Mode	 Shift + Format
 Language/I/II	 Dual
 S.Mode	 Shift + Dual
 Size	 Format
 T.Shift	 Sleep
 Still/Reveal	 Options
 Rec/PVR	 Rec
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <</Hold	 <<

Originale	Sostituto
 >>/Index	 >>
 I<</Sub.Code	 I<<
 >>/Cancel	 >>I

