

 







 
 
 
 
 

 
 

 

 

 

 

 

 




 



 
 
 




Originale	Sostituto
 Power	 Power
 Screen	 Picture / Format
 Lang	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 www	 Smart / List
 Red/▲	 Red / Netflix / Search
 Red/▲	 Shift + CH+ /
 Green/▼	 Green / APP / Repeat
 Green/▼	 Shift + CH- /
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Originale	Sostituto
 7	 7
 8	 8
 [≡]/Text	 Text / Goto
 9	 9
 0	 0
 Recall	 Back / Return
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Right	 Right
 Return	 Shift + Back / Return
 Down	 Down
 OK	 OK
 Source	 AV / Input / RDS
 FAV	 Fav / Marker / PC
 Presets	 Setup / OPT /
 Sleep	 Sleep / Timer





Originale		Sostituto		Originale		Sostituto	
V+	Vol+	VOL +	Vol+				
P+	P+	CH PAGE +	CH+ / Page+				
INFO	Info	ANGLE INFO	Info / Angle				
Mute	Mute	DIMMER MUTE	Mute / Dimmer				
EPG	EPG	GUIDE EPG	Guide / EPG / -/--				
V-	Vol-	VOL -	Vol-				
P-	P-	CH PAGE -	CH- / Page-				

