




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 TV/AUX	 Smart
 Aspect	 Format
 TV	 Media
 Recall	 Back
 Radio	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 Text	 Text
 FAV	 Pre Ch
 P-	 Ch -
 P+	 Ch +
 Info	 Info
 Up	 Up
 Left	 Left
 OK	 Ok
 OK	 Shift + Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Exit	 Exit
 Red / Lang	 Red
 Red / Lang	 Dual
 Green / Pause	 Green
 Green / Pause	 Pause





Originale		Sostituto		Originale	Sostituto
	SOUND Yellow / Sound		C Yellow		
	SOUND Yellow / Sound		SHIFT + DUAL Dual		
	EPG Blue / EPG		D Blue		
	EPG Blue / EPG		GUIDE Guide		

