

 
 




 
 

 
 

 




 

 
 
 


 
 

 




Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 M	 Menu
 --	 Guide
 Up	 Up
 OK	 Ok
 Down	 Down
 Right	 Right

Originale	Sostituto
 Left	 Left
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Red	 Red
 Sound	 Dual
 Green	 Green
 Picture	 Format
 Yellow	 Yellow
 Feature	 Media
 Blue	 Blue
 Install	 Smart
 AV	 AV
 TV	 TV/R
 TXT	 Text
 Mute	 Mute

