 

 
 
 
 
 

 

 

 

 

 

 
 
 
 
 


 




















 

 
 
 







 
 
 

 

 

 
 




Originale	Sostituto
 Power	 Power
 TV	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 .	 Guide
 Recall	 Pre Ch
 Enter	 Ok
 Up	 Up
 Down	 Down

Originale	Sostituto
 Right	 Right
 Left	 Left
 Menu	 Menu
 Exit	 Exit
 Home	 Smart
 Info	 Info
 Favorite	 Shift + Pre Ch
 Mute	 Mute
 Input	 AV
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Picture	 Format
 Zoom	 Eject
 Audio	 Shift + Dual
 CCD	 Subt





Originale	Sostituto	Originale	Sostituto
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 <<	 <<		
 >>	 >>		
  <<	  <<		
 >>	 >>		
 MTS/SAP	 Dual		
 CH List	 List		
 Sleep	 Sleep		
 Video	 Red		
 HDMI	 Green		
 ACC	 Yellow		

