
 
 
 

 





 



 
 




 


 
 

 


Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV / Radio	 TV/R
 Last	 Back
 Red / Audio	 Red
 Red / Audio	 Dual
 Green / Sub	 Green

Originale	Sostituto
 Green / Sub	 Subt
 Yellow	 Yellow
 Blue	 Blue
 Vol-	 Vol -
 Vol+	 Vol +
 Info	 Info
 Exit	 Exit
 EPG	 Guide
 Smart	 Smart
 File	 Media
 Menu	 Menu
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 TTX	 Text





Originale		Sostituto		Originale		Sostituto	
	OPT		Options				
	<<		<<				
	>>		>>				
	Play		Play				
	Stop		Stop				
	Rec		Rec				
	Pause		Pause				
	F1		Shift + 1				
	F2		Shift + 2				

