




Originale	Sostituto
	Mute / Dimmer
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Info / Angle
	0
	AV / Input / RDS
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat

Originale	Sostituto
	Blue / Prime Video / Random
	Setup / OPT /
	Up
	Menu / Home
	Left
	OK
	Right
	Text / Goto
	Down
	Back / Return
	CH+ / Page+
	Vol+
	CH- / Page-
	Vol-
	Smart / List
	<< / Tune-
	TV/Radio /





Originale		Sostituto		Originale	Sostituto
	Play		Play / Slow		
	Guide/[◆]		Guide / EPG / -/--		
	>>		>> / Tune+		
	[^]/Timer		Display / Media		
	Rec/Top Menu		D.Menu / Top		
	Rec/Top Menu		Rec / Rec Mode		
	I-II/[X]		Audio / Lang I/II		
	Stop		Stop / Hold		
	[...]/[≡i]		Subtitle / EQ		
	Pause		Pause / Step / Freeze		
	Zoom		Zoom / Size		
	(↔)		Sound / Title		





 

 

 












Originale	Sostituto
Power	Power
Up	Up
Menu	Menu / Home
Left	Left
OK	OK
Right	Right
Down	Down
Back	Back / Return
↑	CH+ / Page+
↓	CH- / Page-
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
Rec/Top Menu	D.Menu / Top
Rec/Top Menu	Rec / Rec Mode
Stop	Stop / Hold
Pause	Pause / Step / Freeze

Originale	Sostituto





	Originale	Sostituto	Originale	Sostituto
	Power			
	Up			
	Down			
	<<			
	Play			
	>>			
	Rec			
	Stop			
	Pause	