



 

 


 






 







 





 


 








 
 












	Originale	Sostituto	Originale	Sostituto
	 Standby/On	 Power	 Menu/Bluetooth Setting	 Menu
1	1	 1	 Gt.AMP Mode	 D. Menu
2	2	 2	 Cancel	 Exit
3	3	 3	 Up	 Up
4	4	 4	 Down	 Down
5	5	 5	 >>/>>	 >>
6	6	 6	  <</<<	 <<
7	7	 7	 SET	 OK
8	8	 8	 Tuner	 TV/R
9	9	 9	 Audio In	 3D
10	10	 0	 Play/Pause	 Red
+10	+10	 GUIDE	 Play/Pause CD	 Play
+100	+100	 PRE-CH	 Play/Pause iPod	 Green
DISPLAY	Display	 INFO	 Play/Pause Bluetooth	 Pause
SLEEP	Sleep	 SLEEP	 Play/Pause Metronome	 Yellow
A.P.S.	A.P.S.	 MEDIA	 Stop	 Stop
CLOCK/TIMER	Clock/Timer	 AV	 FM Mode	 Format





	Originale	Sostituto	
PLAY MODE	Play Mode	SHIFT + PLAY MODE	Shift + Play
REPEAT	Repeat	REPEAT TEXT	Text
SOUND MODE	Sound Mode	SOUND DUAL	Dual
REC/DELETE	Rec/Delete	REC MODE	Rec
REC SPEED	Rec Speed	D	Blue
REC MODE	Rec Mode	SHIFT + REC MODE	Shift + Rec
TREBLE	Treble+	+ CH	Ch +
	Treble-	- CH	Ch -
BASS	Bass+	[Right Arrow]	Right
	Bass-	[Left Arrow]	Left
SUPER WOOFER	Super Woofer Volume+	SHIFT + + VOL	Shift + Vol +
VOLUME	Super Woofer Volume-	SHIFT + - VOL	Shift + Vol -
	Vol+	+ VOL	Vol +
	Vol-	- VOL	Vol -
MUTING	Muting	MUTE	Mute

Originale	Sostituto

