




 








 

 




 


 


 


 

 
 
 

 
 












 
 




























Originale	Sostituto	Originale	Sostituto
 Power Tv	 Power	 Vol-	 Vol -
 Tv/Video	 TV/R	 Muting	 Mute
 CH+	 Ch +		
 CH-	 Ch -		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 10/Tv Return	 Guide		
 +10/100+	 Pre Ch		
 Vol+	 Vol +		

Originale	Sostituto	Originale	Sostituto
 Power Tv	 Power	 Vol-	 Vol -
 Tv/Video	 TV/R	 Muting	 Mute
 CH+	 Ch +		
 CH-	 Ch -		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 10/Tv Return	 Guide		
 +10/100+	 Pre Ch		
 Vol+	 Vol +		





Originale	Sostituto
 Power Audio	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10 / Tv Return	 Guide
 +10 / 100+	 Pre Ch
 CH+	 Ch +
 CH-	 Ch -
 Up	 Up
 Enter	 Ok

Originale	Sostituto
 Down	 Down
 Right/Presets Up	 Right
 Left/Presets Down	 Left
 Muting	 Mute
 Menu/PL	 Menu
 Top Menu/PG	 Shift + Menu
 On Screen	 3D
 Back / Rec	 Rec
 Stop / Memory	 Stop
 Play	 Play
 Pause/FM Mode	 Pause
 I<</Tuning-	 I<<
 >>I/Tuning+	 >>I
 <</Slow-	 <<
 >>/Slow+	 >>
 Audio	 Dual
 Angle	 Shift + 3D





Originale	Sostituto
 Zoom	 Eject
 Subtitle	 Subt
 Vol+	 Vol +
 Vol-	 Vol -
 Repeat	 Text
 Page	 List
 Surround	 Smart
 PTY Search	 AV
 TA/News/Info	 Info
 PTY Select-	 Shift + Left
 PTY Select+	 Shift + Right
 Level+	 Shift + Up
 Level-	 Shift + Down
 Sleep	 Sleep
 Return	 Back
 Display	 Shift + Info
 Play Mode	 Format

Originale	Sostituto
 STB Control	 Shift + Smart
 Dimmer	 Shift + Media
 USB Memory	 Media
 Cancel	 Exit
 DVD	 Blue
 iPod	 Red
 FM/AM	 Green
 VCR/Video Control	 Yellow
 Tv/Video	 TV/R
 Set Up	 D. Menu
 SPK Level	 Shift + AV
 Setting	 Options
 Treble/Bass	 Shift + Sleep
 Title/Group	 Shift + List
 VFP/Scan Mode	 Shift + Options
 Tv Sound	 Shift + Dual



