




 





 

 



 











 











 







 



 



 
 
 

 










Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Display	 Info
 VCR/DVD	 Media	 On Screen/Progressiv	 3D
 DVD Timer	 Green	 Top	 Shift + Menu
 VCR Timer	 Red	 Menu	 Menu
 1	 1	 Set Up	 Options
 2	 2	 Return	 Back
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 Enter	 Ok
 8	 8	 I<</Previous	 I<<
 9	 9	 >>I/Next	 >>I
 0/AUX	 0	 <</Slow-	 <<
 X/Cancel	 Exit	 Play/Select	 Play
 Showview/Video Plus+	 Guide	 >>/Slow+	 >>
 Prog/Check	 Sleep	 Stop/Clear	 Stop

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Display	 Info
 VCR/DVD	 Media	 On Screen/Progressiv	 3D
 DVD Timer	 Green	 Top	 Shift + Menu
 VCR Timer	 Red	 Menu	 Menu
 1	 1	 Set Up	 Options
 2	 2	 Return	 Back
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 Enter	 Ok
 8	 8	 I<</Previous	 I<<
 9	 9	 >>I/Next	 >>I
 0/AUX	 0	 <</Slow-	 <<
 X/Cancel	 Exit	 Play/Select	 Play
 Showview/Video Plus+	 Guide	 >>/Slow+	 >>
 Prog/Check	 Sleep	 Stop/Clear	 Stop









Originale	Sostituto	Originale	Sostituto
Power	Power	Prog/Check	Sleep
VCR/DVD	Media	Display	Info
DVD Timer	Green	On Screen/Progressiv	3D
VCR Timer	Red	Top	Shift + Menu
1	1	Menu	Menu
2	2	Set Up	Options
3	3	Return	Back
4	4	Up	Up
5	5	Down	Down
6	6	Right	Right
7	7	Left	Left
8	8	Enter	Ok
9	9	I<</Previous	I<<
0/AUX	0	>>/Next	>>I
X/Cancel	Exit	<</Slow-	<<
Memory/Mark	Smart	Play Select	Play
Showview/Video Plus+	Guide	>>/Slow+	>>






 

 
 
 

 

 































 



 
 






 



 






Originale	Sostituto	Originale	Sostituto
Power	Power	Prog/Check	Sleep
VCR/DVD	Media	Display	Info
DVD Timer	Green	On Screen/Progressiv	3D
VCR Timer	Red	Top	Shift + Menu
1	1	Menu	Menu
2	2	Set Up	Options
3	3	Return	Back
4	4	Up	Up
5	5	Down	Down
6	6	Right	Right
7	7	Left	Left
8	8	Enter	Ok
9	9	I<</Previous	I<<
0/AUX	0	>>/Next	>>I
X/Cancel	Exit	<</Slow-	<<
Memory/Mark	Smart	Play Select	Play
Showview/Video Plus+	Guide	>>/Slow+	>>









Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Menu	 Menu
 VCR/DVD	 Media	 Up	 Up
 DVD Timer	 Green	 Down	 Down
 VCR Timer	 Red	 Right	 Right
 1	 1	 Left	 Left
 2	 2	 Enter	 Ok
 3	 3	 I<</Previous	 I<<
 4	 4	 >>/Next	 >>I
 5	 5	 <</Slow-	 <<
 6	 6	 Play/Select	 Play
 7	 7	 >>/Slow+	 >>
 8	 8	 Stop/Clear	 Stop
 9	 9	 Pause	 Pause
 0/AUX	 0	 Rec	 Rec
 Prog/Check	 Sleep	 Remain/Rec	 Shift + Rec
 Display	 Info	 ↔	 Pre Ch
 Top	 Shift + Menu	 →	 Blue

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Menu	 Menu
 VCR/DVD	 Media	 Up	 Up
 DVD Timer	 Green	 Down	 Down
 VCR Timer	 Red	 Right	 Right
 1	 1	 Left	 Left
 2	 2	 Enter	 Ok
 3	 3	 I<</Previous	 I<<
 4	 4	 >>/Next	 >>I
 5	 5	 <</Slow-	 <<
 6	 6	 Play/Select	 Play
 7	 7	 >>/Slow+	 >>
 8	 8	 Stop/Clear	 Stop
 9	 9	 Pause	 Pause
 0/AUX	 0	 Rec	 Rec
 Prog/Check	 Sleep	 Remain/Rec	 Shift + Rec
 Display	 Info	 ↔	 Pre Ch
 Top	 Shift + Menu	 →	 Blue



