




 







Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 FAV	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0

Originale	Sostituto
 Back	 Back / Return
 Vol+	 Vol+
 CH List	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Aspect	 Shift + Picture / Format
 CH-	 CH- / Page-
 EPG	 Guide / EPG / -/--
 Audio	 Audio / Lang I/II
 Rec	 Rec / Rec Mode
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 Enter	 OK
 Right	 Right
 Source	 AV / Input / RDS





Originale	Sostituto
Down	Down
Display	Display / Media
Red	Red / Netflix / Search
<<	<< / Tune-
Green	Green / APP / Repeat
>>	>> / Tune+
Yellow	Yellow / YouTube / Repeat
I<<	I<< / Preset-
Blue	Blue / Prime Video / Random
>>I	>>I / Preset+
Text	Text / Goto
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze
Index	Info / Angle
Size	Zoom / Size
Reveal	D.Menu / Top

Originale	Sostituto
Hold	Shift + Stop /
Subpage	Eject / Surround
Subtitle	Subtitle / EQ

