














 

 




 

 



 

 



 

 





















 





 
 





Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv/Radio	 TV/R
 EPG	 Guide
 Menu	 Menu
 Exit	 Exit
 OK/List	 Ok

Originale	Sostituto
 ←PR	 Back
 FAV	 Pre Ch
 Up	 Up
 PR+	 Ch +
 PR-	 Ch -
 Down	 Down
 Right	 Right
 Left	 Left
 Vol+	 Vol +
 Vol-	 Vol -
 Red/Find	 Red
 Green/Zoom	 Green
 Yellow	 Yellow
 Text	 Text
 Blue	 Blue
 Audio L/R	 Dual
 Info	 Info





	Originale	Sostituto		Sostituto
	Tv/AV	 AV	AV	AV
	Sleep	 SLEEP	Sleep	Sleep
	[+]	 OPT	Options	
	Record	 REC MODE	Rec	
	Play	 PLAY MODE	Play	
	Stop	 STOP	Stop	
	Shift	 APP MEDIA	Media	
	<< Fast		<<	
	Fast >>		>>	
	< Slow		I<<	
	Slow >		>>I	
	Pause		Pause	
	↑/Page+	 ECO 3D	3D	
	↓/Page-	 PICTURE FORMAT	Format	

	Originale	Sostituto

