





















 


 

 
 
 





 



 
 









 

 


 







 

 



 
 

 
 
 



 



Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu
 Exit	 Exit
 Last	 Pre Ch
 Tv/R	 TV/R
 Up	 Up

Originale	Sostituto
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 CH +	 Ch +
 CH -	 Ch -
 Vol +	 Vol +
 Vol -	 Vol -
 Sub-T.	 Subt
 Info	 Info
 Text	 Text
 Audio	 Dual
 USB	 AV
 Timer	 Shift + AV
 Favor	 Shift + Pre Ch
 Red/Left	 Red
 Green/Right	 Green





Originale	Sostituto	Originale	Sostituto
 Yellow/>>	 Yellow		
 Blue/>>	 Blue		
 Rec	 Rec		
 Stop	 Stop		
 Play	 Play		
 Pause	 Pause		

Originale	Sostituto

