





















































Originale	Sostituto	Originale	Sostituto
On/Off	 Power	OK Enter	 OK
Mute	 Mute / Dimmer	Menu Right	 Right
Txt Stop	 Stop / Hold	Menu Off	 Exit / Cancel / Clear
Reveal	 Pause / Step / Freeze	Menu Down	 Down
Update	 Play / Slow	Back	 Back / Return
Info	 Info / Angle	Volume+	 Vol+
Subt.List	 Subtitle / EQ	Chan.Up	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Return TV	 TV/Radio /	Menu audio	 Audio / Lang I/II
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-
Text	 Text / Goto	1	 1
Txt Expand	 Zoom / Size	2	 2
TV/AV	 AV / Input / RDS	3	 3
Menu	 Menu / Home	4	 4
Menu Up	 Up	5	 5
Display	 Display / Media	6	 6
Menu Left	 Left	7	 7



Originale	Sostituto	Originale	Sostituto
8	 8	Color- S.Std	 Sound / Title
9	 9	Contrast+	 >> / Preset+
Guide -/-- 1.	 Guide / EPG / -/--	Contrast-	 << / Preset-
0/10	 0	Surround	 Eject / Surround
2.Fav P/C 2.	 Fav / Marker / PC	Nicam/Mono	 Shift + Audio / Lang I/II
Red	 Red / Netflix / Search	AV 2	 Shift + AV / Input / RDS
Green	 Green / APP / Repeat	Bright+ Mode	 Shift + CH+ /
Yellow	 Yellow / YouTube / Repeat	Level L	 Shift + Left
Blue	 Blue / Prime Video / Random	Level R/Woofers	 Shift + Right
Color+ P.Std	 Picture / Format	Disp	 Shift + Display / Media
Off/Tim	 Setup / OPT /	Bright- Sys	 Shift + CH- /
Tune-	 << / Tune-		
Audio-	 Shift + Vol-		
Mix Scan	 Smart / List		
Audio+	 Shift + Vol+		
Game Coo	 Rec / Rec Mode		
Tune+	 >> / Tune+		

