




| Originale | Sostituto |
|---|---|
|  |  Mute / Dimmer |
|  |  Power |
|  |  Back / Return |
|  |  Audio / Lang I/II |
|  |  1 |
|  |  2 |
|  |  3 |
|  |  4 |
|  |  5 |
|  |  6 |
|  |  7 |
|  |  8 |
|  |  9 |
|  |  0 |
|  |  Fav / Marker / PC |
|  |  Display / Media |
|  |  Menu / Home |

| Originale | Sostituto |
|---|---|
|  |  Info / Angle |
|  |  Left |
|  |  Up |
|  |  CH+ / Page+ |
|  |  Right |
|  |  Down |
|  |  CH- / Page- |
|  |  Vol- |
|  |  Vol+ |
|  |  Red / Netflix / Search |
|  |  Green / APP / Repeat |
|  |  Yellow / YouTube / Repeat |
|  |  Blue / Prime Video / Random |
|  |  TV/Radio / |
|  |  AV / Input / RDS |
|  |  Text / Goto |
|  |  Shift + Text / Goto |





| | Originale | Sostituto | Originale | Sostituto |
|---|-----------|---|-----------|-----------|
|  | Subcode |  Sleep / Timer | | |
|  | Hold |  Stop / Hold | | |
|  | Cancel |  Exit / Cancel / Clear | | |
|  | Size |  Zoom / Size | | |
|  | Reveal |  Picture / Format | | |
|  | Index |  OK | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

