 





 

 





 




















 


































Originale		Sostituto		Originale		Sostituto	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Check		OK
	Play/Pause		Play / Slow		Right		Right
	Stop		Stop / Hold		Clear		Exit / Cancel / Clear
	I<<		I<< / Preset-		Down		Down
	>>I		>>I / Preset+		Volume Control +		Vol+
	EQ.Effect		Sound / Title		M.Call		Smart / List
	S.W.Effect		Audio / Lang I/II		P.Call Up		CH+ / Page+
	P.Open/Close		Eject / Surround		Volume Control -		Vol-
	P.Mode		Picture / Format		Display		Display / Media
	Sleep		Sleep / Timer		P.Call Down		CH- / Page-
	Tuner Band		TV/Radio /		1		1
	Presence		D.Menu / Top		2		2
	AI/Loudness		Setup / OPT /		3		3
	AI/Auto/Focus/GE		Text / Goto		4		4
	LD/AUX		AV / Input / RDS		5		5
	Up		Up		6		6





Originale	Sostituto
	 7
	 8
	 9
+10	 Guide / EPG / -/--
	 0
Edit	 Fav / Marker / PC
Repeat	 Green / APP / Repeat
S.W.Power	 +  Shift + Power
Off	 +  Shift + Mute / Dimmer
S.W.Vol+	 +  Shift + Vol+
P	 +  Shift + Smart / List
S.W.Vol-	 +  Shift + Vol-
	 +  Shift + 1
	 +  Shift + 2
CD	 +  Shift + 3
	 +  Shift + 4
Tape	 +  Shift + 5

Originale	Sostituto
Tuner	 +  Shift + 6
Changer CD 3	 +  Shift + 7
Changer CD 5	 +  Shift + 8
Changer CD 6	 +  Shift + 9



