


 

 
 


 
 
 

 

 

 

 

 

 

 

 



 






| Originale | Sostituto |
|--|---|
|  Power |  Power |
|  Exit |  Exit |
|  Display |  Shift + Info |
|  TV/AV |  AV |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Recall |  Pre Ch |
|  Back |  Back |
|  -/-- |  Shift + Guide |

| Originale | Sostituto |
|---|--|
|  [≡?] |  Smart |
|  [≡⇅] |  Eject |
|  [/≡] |  Shift + Text |
|  [≡□] |  Stop |
|  [≡●] |  Media |
|  [≡i] |  List |
|  [≡] |  Text |
|  Menu 1 |  D. Menu |
|  Exit 1 |  Shift + Exit |
|  Info |  Info |
|  Up |  Up |
|  Left |  Left |
|  OK |  Ok |
|  Right |  Right |
|  Down |  Down |
|  Pause |  Pause |
|  PGUP |  Shift + Ch + |





| Originale | Sostituto |
|----------------|--------------|
| PGDN | Shift + Ch - |
| TV / Audio | TV/R |
| Audio Setting | Options |
| Text 1 | Shift + Subt |
| EPG | Guide |
| Subtitle | Subt |
| 9 Picture | Shift + 9 |
| Sleep | Sleep |
| I/II | Dual |
| Mute | Mute |
| Red / Enter | Red |
| Green / P.Mode | Green |
| Green / P.Mode | Format |
| Yellow / ANA | Yellow |
| Blue / S.Mode | Blue |
| Blue / S.Mode | Shift + Dual |
| Up / P+ | Ch + |

| Originale | Sostituto |
|------------|---------------|
| Up / P+ | Shift + Up |
| Down / P- | Ch - |
| Down / P- | Shift + Down |
| Right / V+ | Vol + |
| Right / V+ | Shift + Right |
| Left / V- | Vol - |
| Left / V- | Shift + Left |
| Menu | Menu |
| Menu | Shift + Ok |

