



Originale	Sostituto
Power	Power
Mute	Mute
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
ASPECT	Format
P.C.	Pre Ch
MENU	Menu
SOURCE	Shift + AV
Up	Up

Originale	Sostituto
Right	Right
Down	Down
Left	Left
OK	Ok
Exit	Exit
Display	Info
Vol +	Vol +
Vol -	Vol -
CH +	Ch +
CH -	Ch -
Sound	Dual
PIC	Shift + Format
NICAM	Media
SLEEP	Sleep
TV	Smart
AV	AV
HDMI	Shift + Media



