


 



 

 







 

 


 





 










Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Vol+	 Vol+
 TV/RAD	 TV/Radio /	 Mute	 Mute / Dimmer
 Input	 AV / Input / RDS	 PR+/Page Up	 CH+ / Page+
 AV Mode	 Picture / Format	 Vol-	 Vol-
 Energy Saving	 Eject / Surround	 PR-/Page Down	 CH- / Page-
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Menu	 Menu / Home
 6	 6	 Down	 Down
 7	 7	 Return	 Back / Return
 8	 8	 Red	 Red / Netflix / Search
 9	 9	 Green/Stop	 Green / APP / Repeat
 List	 Smart / List	 Green/Stop	 Stop / Hold
 0	 0	 Yellow/Play	 Yellow / YouTube / Repeat
 Q.View	 Display / Media	 Yellow/Play	 Play / Slow

Originale	Sostituto	Originale	Sostituto
 DIMMER MUTE	 SHIFT	 TV	 DVD
 SLOW	 SAT	 AUX	 REC MODE
 STEP-FREEZE	 HOLD	 TUNE+	 PRESET+
 TUNE-	 EQ	 TUNE+	 SURROUND
 TITLE	 SUBTITLE	 LANG	 PROGRAM
 SOUND	 TIMER	 EQ	 TV RADIO
 AUDIO	 SLEEP	 SURROUND	 RDS
 PICTURE	 TOP MENU	 PROGRAM	 AV INPUT
 ZOOM	 OPT-TOOLS	 TV RADIO	
 SLEEP	 GOTO	 RDS	
 TV RADIO	 D.MENU	 AV INPUT	
 HOME	 SETUP		
 MENU	 TEXT		
 ANGLE	 AV INPUT		
 INFO			
 CLEAR			
 EXIT			
 CANCEL			
LIST			
SMART			
MEDIA			
DISPLAY			
TV			
DVD			
CD - STB			
VIDEO			
TAPE			
AUX - HDD			
USB			
BLUE TOOTH			
HDMI - BAT			
FC			
GUIDE EPG			
FAV MARKER			
NETFLIX			
APP			
YouTube			
Prime Video			
SEARCH			
REPEAT			
REPEAT A-B			
RANDOM			
 www.mandis.tv			



