 



 
 
 
 
 
 

 
 

 

 
 
 
 


 
 
 

 
 


 
 
 





Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Repeat	 Text
 Play	 Play
 Stop	 Stop
 Pause	 Pause

Originale	Sostituto
 >>	 >>
 <<	 <<
 >>	 >>
 <<	 <<
 Disc Menu	 D. Menu
 Info/Menu	 Info
 Back	 Back
 Home	 Smart
 Title/Popup	 Options
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Red	 Red
 Green	 Green
 Yellow	 Yellow





Originale	Sostituto	Originale	Sostituto
 B	Blue	 D	Blue
 Power	Power Tv	 SHIFT +  Power	Shift + Power
 INPUT	Input Tv	 TIMER AV	AV
 VOL-	Vol-	 VOL-	Vol -
 VOL+	Vol+	 VOL+	Vol +

Originale	Sostituto

