



Originale	Sostituto
Power	Power
Open/Close	Eject
Vol+	Vol +
Vol-	Vol -
F	Menu
Mute	Mute
Preset/Folder Up	Ch +
Prset/Folder Down	Ch -
Jukebox/Memor	Red
Auto Dj	Green
Delete	Blue
Repeat	Text
Stop	Stop
>>I/Tuning+	>>I
I<</Tuning-	I<<
Play / Pause	Pause
Play / Pause	Play

Originale	Sostituto
Equalizer	Options
Special EQ	Dual
( i )	Info
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Clock	Shift + AV
Alarm	Smart
Voice Cancellor	Yellow
Sleep	Sleep





Originale		Sostituto		Originale		Sostituto	
	RDS/Set		Media				
	Key Changer #		TV/R				
	Key Changer b		3D				
	Mic Echo		Subt				
	PTY		AV				
	Vocal Effects		Format				
	USB Rec		Rec				

