



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol +		Vol +
	TV / RAD		TV/R		Vol -		Vol -
	Energy Saving		3D		Mark / Fav		Pre Ch
	AV Mode		Shift + AV		Mute		Mute
	Input		AV		P + / Page +		Ch +
	1		1		P - / Page -		Ch -
	2		2		Menu		Menu
	3		3		Ratio		Format
	4		4		Q.Menu		D. Menu
	5		5		Up		Up
	6		6		Right		Right
	7		7		Down		Down
	8		8		Left		Left
	9		9		OK		Ok
	0		0		Guide		Guide
	List		List		Info		Info
	Q.View		Media		Return / Exit		Exit





Originale		Sostituto		Originale	Sostituto
	Return / Exit		Back		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Text		Text		
	T.Opt		Options		
	Subtitle		Subt		
	Stop		Stop		
	Play		Play		
	Pause		Pause		
	<<		<<		
	>>		>>		
	<<		I<<		
	>>		>>I		
	Simplink		Smart		

