





Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
Tuner/Band	Shift + 6
DVD	Shift + 2
Portable	Shift + 3
USB	Shift + 8
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
EQ	Shift + Subtitle / EQ

Originale	Sostituto
XDSS plus	Smart / List
Sound Mode	Sound / Title
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Return	Back / Return
Setup	Setup / OPT /
Up/Preset+	Up
Display	Display / Media
Left/Tun.-	Left
Select/Enter	OK
Right/Tun.+	Right
Menu	Menu / Home
Down/Preset-	Down
Title	Shift + Sound / Title
Prog. Memo	TV/Radio /
<</Scan-	<< / Tune-
>>/Scan+	>> / Tune+





Originale	Sostituto
 Volume+	 Vol+
 Repeat	 Green / APP / Repeat
 </Slow-	 CH- / Page-
  >/Slow+	 CH+ / Page+
 Repeat A/B	 Yellow / YouTube / Repeat
 I<</Skip-	 I<< / Preset-
 >>I/Skip+	 >>I / Preset+
 Volume-	 Vol-
 Stop/Mo/ST	 Stop / Hold
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 Clear	 Exit / Cancel / Clear
 Zoom	 Zoom / Size
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 Sleep	 Sleep / Timer
 RDS	 AV / Input / RDS

Originale	Sostituto
 PTY	 Picture / Format

