



 



 



 

 



 

 



 



 











































Originale		Sostituto		Originale		Sostituto	
	Power		Power		Down		Down
	Mute		Mute / Dimmer		Exit		Exit / Cancel / Clear
	Picture		Picture / Format		1		1
	Sound		Sound / Title		2		2
	Aspect		Shift + Picture / Format		3		3
	Sleep		Sleep / Timer		4		4
	Subtitle		Subtitle / EQ		5		5
	CH. List		Smart / List		6		6
	EPG		Guide / EPG / -/--		7		7
	FAV		Fav / Marker / PC		8		8
	TV / Radio		TV/Radio /		9		9
	Up		Up		0		0
	Input		AV / Input / RDS		Recall		Back / Return
	Left		Left		Info		Info / Angle
	OK		OK		Vol +		Vol+
	Right		Right		Rec		Rec / Rec Mode
	Menu		Menu / Home		Rec. List		Display / Media





Originale	Sostituto
CH +	CH+ / Page+
Vol -	Vol-
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze
Stop	Stop / Hold
CH -	CH- / Page-
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
TV / TXT	Text / Goto
Cancel	Shift + Exit / Cancel / Clear
Reveal	Eject / Surround
Nicam / A2	Audio / Lang I/II
<< / Index	<< / Tune-
>> / Hold	>> / Tune+
I<< / Size	I<< / Preset-

Originale	Sostituto
>>I / Subpage	>>I / Preset+

