

 

 

 

 

 



 



 

 





 





 









 







 

 

 







 

 







Originale	Sostituto
 Power	 Power
 Sleep	 Sleep / Timer
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 Recall	 Back / Return
 - [ / ] - P.STD	 Smart / List
 - [ I ] - S.STD	 Sound / Title

Originale	Sostituto
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 Program+	 CH+ / Page+
 Vol-	 Vol-
 Program-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Info	 Info / Angle
 Aspect	 Picture / Format
 I/II	 Audio / Lang I/II
 [ / = ] / Mix	 Subtitle / EQ
 [ = x ] / Cancel	 TV / Radio /



