 




 


 


 


 
 
 
 





 


 

 


 
 

 







Originale	Sostituto
 Power	 Power
 Premium On	 Smart
 Guida	 Guide
 Menu	 Menu
 Info	 Info
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Back	 Back
 Exit	 Exit
 Stop	 Stop

Originale	Sostituto
 Play	 Play
 Pause	 Pause
 >>	 >>
 <<	 <<
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Lista	 List
 Opzioni	 Options
 Red	 Red





Originale		Sostituto		Originale	Sostituto
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Text		Text		
	APP		Media		
	Recall		Pre Ch		

