
 

 

 
 





Originale	Sostituto	Originale	Sostituto
 POWER	 Power	 GUIDE	 Guide
 TV/Radio	 TV/R	 FAV	 Pre Ch
 EXIT	 Exit	 OK	 Ok
 MENU	 Menu	 UP	 Up
 AUDIO	 Dual	 DOWN	 Down
 MUTE	 Mute	 RIGHT	 Right
 TEXT	 Text	 LEFT	 Left
 1	 1	 VOL+	 Vol +
 2	 2	 VOL-	 Vol -
 3	 3	 CH+	 Ch +
 4	 4	 CH-	 Ch -
 5	 5	 SLEEP	 Sleep
 6	 6	 BACK	 Back
 7	 7	 RED	 Red
 8	 8	 GREEN	 Green
 9	 9	 YELLOW	 Yellow
 0	 0	 BLUE	 Blue





Originale		Sostituto		Originale		Sostituto	
	↑		Shift + Ch +		BOOK		Smart
	↓		Shift + Ch -				
	A - B		I<<				
	STEP		>>I				
	STOP		Stop				
	PAUSE		Pause				
	REC		Rec				
	REW		<<				
	PLAY		Play				
	FWD		>>				
	SUBTITLE		Subt				
	V-FORMAT		Format				
	INFO		Info				
	OPTION		Options				
	PLAYLIST		Media				
	LIST		List				
	TIME		AV				

