

 


 
 
 
 

 
 
 










 







 



 
 


 



 

 

 
 
 

 
 
 
 
 
 


 
 


 
 

 








Originale		Sostituto		Originale		Sostituto	
	Power		Power		Menu		Menu
	Mute		Mute		EPG		Guide
	1		1		Exit		Exit
	2		2		Up		Up
	3		3		CH+		Ch +
	4		4		Down		Down
	5		5		CH-		Ch -
	6		6		Right		Right
	7		7		Vol+		Vol +
	8		8		Left		Left
	9		9		Vol-		Vol -
	0		0		OK		Ok
	FAV		Pre Ch		Text		Text
	Recall		Back		Red		Red
	Audio		Dual		Green		Green
	Subtitle		Subt		Pause		Pause
	Info		Info		Yellow		Yellow





Originale	Sostituto
 Tv/Radio	 TV/R
 Blue	 Blue

Originale	Sostituto

