
 


 


 
 




| Originale | Sostituto | Originale | Sostituto |
|---|--|--|--|
|  Power |  Power |  5 |  5 |
|  Red/Sound ↑ |  Red |  6 |  6 |
|  Green/Picture/↓ |  Green |  7 |  7 |
|  Yellow/Feature |  Yellow |  8 |  8 |
|  Blue/Install |  Blue |  9 |  9 |
|  [=] |  REPEAT TEXT |  0 |  0 |
|  [=0] |  SETTINGS OPT |  P<P |  FAV PRE-CH |
|  [=+] |  AD SUBT |  EXIT |  SHIFT + GUIDE |
|  [=x]/[· ·] |  PICTURE FORMAT |  Vol+ |  + VOL |
|  [/]/[*] |  RETURN BACK |  Vol- |  VOL - |
|  [+](=[♦]/Wide |  ECO 3D |  Mute |  MUTE |
|  [=?]/PC |  HOME SMART |  P+ |  + CH |
|  [=i]/Guide |  GUIDE |  P- |  CH - |
|  1 |  1 |  I-II |  SOUND DUAL |
|  2 |  2 |  [i]/Info |  DISPLAY INFO |
|  3 |  3 |  TV/DTV |  SEARCH TV/R |
|  4 |  4 |  AV |  TIMER AV |

| Originale | Sostituto | Originale | Sostituto |
|---|--|--|--|
|  Power |  Power |  5 |  5 |
|  Red/Sound ↑ |  Red |  6 |  6 |
|  Green/Picture/↓ |  Green |  7 |  7 |
|  Yellow/Feature |  Yellow |  8 |  8 |
|  Blue/Install |  Blue |  9 |  9 |
|  [=] |  REPEAT TEXT |  0 |  0 |
|  [=0] |  SETTINGS OPT |  P<P |  FAV PRE-CH |
|  [=+] |  AD SUBT |  EXIT |  SHIFT + GUIDE |
|  [=x]/[· ·] |  PICTURE FORMAT |  Vol+ |  + VOL |
|  [/]/[*] |  RETURN BACK |  Vol- |  VOL - |
|  [+](=[♦]/Wide |  ECO 3D |  Mute |  MUTE |
|  [=?]/PC |  HOME SMART |  P+ |  + CH |
|  [=i]/Guide |  GUIDE |  P- |  CH - |
|  1 |  1 |  I-II |  SOUND DUAL |
|  2 |  2 |  [i]/Info |  DISPLAY INFO |
|  3 |  3 |  TV/DTV |  SEARCH TV/R |
|  4 |  4 |  AV |  TIMER AV |



