

 










Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-	 SHIFT + GUIDE Shift + Guide
 Recall	 RETURN BACK Back
 Display	 DISPLAY INFO Info
 Source	 TIMER AV AV
 Up	  Up

Originale	Sostituto
 Left	 Left
 Enter	 OK Ok
 Right	 Right
 Down	 Down
 Exit	 CLEAR EXIT Exit
 Menu	 TOP MENU MENU Menu
 Vol+	 + VOL Vol +
 Vol-	 - VOL Vol -
 S.Mode	 SHIFT + SOUND DUAL Shift + Dual
 CH+	 + CH Ch +
 CH-	 - CH Ch -
 Audio I/II	 SOUND DUAL Dual
 P.Mode	 SHIFT + PICTURE FORMAT Shift + Format
 Auto	 HOME SMART Smart
 Sleep	 PROG SLEEP Sleep
 Aspect	 PICTURE FORMAT Format
 Red / Eject	 A Red





Originale	Sostituto
Red / Eject	Eject
Green / D.Menu	Green
Green / D.Menu	D. Menu
Yellow / Setup	Yellow
Yellow / Setup	Options
Blue / D.Disp	Blue
Blue / D.Disp	List
Play/Pause / Text	Text
Play/Pause / Text	Play
Play/Pause / Text	Pause
Stop / Index	Stop
A-B / MIX	Shift + TV/R
Repeat / Reveal	Shift + Text
<< / Hold	Shift + Stop
<< / Hold	<<
>> / Subpage	>>
>> / Subpage	Shift + Subt

Originale	Sostituto
I<< / Size	I<<
I<< / Size	Shift + Eject
>>I / Cancel	>>I
>>I / Cancel	Shift + Exit
Time Shift	Media
Rec	Rec
FAV-	Shift + Left
FAV+	Shift + Right
EPG	Guide
FAV	Pre Ch
Subtitle	Subt
TV / Radio	TV/R

