









 



 
 



 



 



 



 


 
 


 
 


 
 


 
 

 
 
 



 



 


 
 








| Originale | | Sostituto | | Originale | | Sostituto | |
|---|---------------|---|----------------|---|-----------------------|---|-------|
|  | Standby |  | Power |  | Right |  | Right |
|  | Display |  | Shift + Info |  | Down |  | Down |
|  | Nicam / Eject |  | Eject |  | Source |  | AV |
|  | Mute |  | Mute |  | Exit |  | Exit |
|  | P.Mode |  | Shift + Format |  | 1 |  | 1 |
|  | S.Mode |  | Shift + Dual |  | 2 |  | 2 |
|  | Sleep |  | Sleep |  | 3 |  | 3 |
|  | Aspect |  | Format |  | 4 |  | 4 |
|  | Vol - |  | Vol - |  | 5 |  | 5 |
|  | Vol + |  | Vol + |  | 6 |  | 6 |
|  | CH - |  | Ch - |  | 7 |  | 7 |
|  | CH + |  | Ch + |  | 8 |  | 8 |
|  | LCD-Menu |  | Menu |  | 9 |  | 9 |
|  | DVD-Setup |  | Options |  | 0 |  | 0 |
|  | Up |  | Up |  | Recall |  | Back |
|  | Left |  | Left |  | Text / Audio |  | Text |
|  | Enter |  | Ok |  | Hold / A-B / Rec List |  | Smart |





| | Originale | Sostituto | Originale | Sostituto |
|---|-------------------|---|---|---|
|  | Rec |  Rec |  |  +  Shift + Pause |
|  | Time Shift |  Media |  |  >> |
|  | Red / Repeat |  Red |  |  Subt |
|  | Red / Repeat |  +  Shift + Text |  |  Guide |
|  | Green / Zoom |  Green |  |  Pre Ch |
|  | Green / Zoom |  +  Shift + Eject |  |  +  Shift + Sleep |
|  | Yellow / Angle |  Yellow |  |  Info |
|  | Blue / Goto |  Blue | | |
|  | Index / I<< |  I<< | | |
|  | Size / Stop |  Stop | | |
|  | Rev. / Play/Pause |  Play | | |
|  | Rev. / Play/Pause |  Pause | | |
|  | Sub.P / >>I |  >>I | | |
|  | TV/Radio / << |  << | | |
|  | TV/Radio / << |  TV/R | | |
|  | Lang / Menu |  Dual | | |
|  | Lang / Menu |  D. Menu | | |

