 

 



 



 
 










Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 EPG	 Guide
 Rec	 D. Menu
 Rec. List	 Eject
 T-Shift	 3D
 Sub-T	 Subt
 Audio	 Dual
 Sleep	 Sleep
 TV/Radio	 TV/R
 Text	 Text
 Play / Index	 Play
 Pause / Mix	 Pause

Originale	Sostituto
 Stop / Reveal	 Stop
 << / Hold	 <<
 >> / Subpage	 >>
 I<< / Size	 I<<
 >>I / Cancel	 >>I
 Info	 Info
 Input	 AV
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Exit	 Exit
 Vol+	 Vol +
 Vol-	 Vol -
 P-Mode	 Format



