


 

 



 


 








 




 


 



 




 






 

 





 

 







 



 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Sleep		Sleep
	Mute		Mute		CH +		Ch +
	1		1		CH -		Ch -
	2		2		Menu		Menu
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		Ok
	8		8		Exit		Exit
	9		9		Mode		Media
	0		0		TV / Radio		TV/R
	Info		Info		Freeze		Pause
	Back		Back		Subtitle		Subt
	Vol +		Vol +		Text		Text
	Vol -		Vol -		P.Mode		Shift + Format
	Nicam / A2		3D		S.Mode		Dual





Originale		Sostituto	
	Mix		Smart
	Hold		Stop
	Index	 + 	Shift + Info
	Subpage		AV
	Reveal		D. Menu
	Red		Red
	Green		Green
	Size		Format
	Yellow		Yellow
	Blue		Blue
	Zoom		Eject
	Fav-CH		Pre Ch
	EPG		Guide
	CH List		List

Originale	Sostituto

