
 


 



 
 

 

 
 






 

 


 
 
 

 
 

 

 



 







Originale		Sostituto		Originale		Sostituto	
	Power		Power		Sleep		Sleep
	Mute		Mute		CH +		Ch +
	1		1		CH -		Ch -
	2		2		Menu		Menu
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		Ok
	8		8		Exit		Exit
	9		9		Mode		Media
	0		0		TV / Radio		TV/R
	Info		Info		Freeze		Pause
	Back		Back		Subtitle		Subt
	Vol +		Vol +		Text		Text
	Vol -		Vol -		P.Mode		Shift + Format
	Nicam / A2		3D		S.Mode		Dual





Originale	Sostituto
 Mix	 Smart
 Hold	 Stop
 Index	 Shift + Info
 Subpage	 AV
 Reveal	 D. Menu
 Red	 Red
 Green	 Green
 Size	 Format
 Yellow	 Yellow
 Blue	 Blue
 Zoom	 Eject
 Fav-CH	 Pre Ch
 EPG	 Guide
 CH List	 List

Originale	Sostituto

