 








 



 

 


Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Info / ↑	 Info
 Info / ↑	 >>
 Pre / ↓	 <<
 Pre / ↓	 Back
 Menu	 Menu

Originale	Sostituto
 SAT	 Smart
 Up / CH +	 Up
 Up / CH +	 Ch +
 Down / CH -	 Down
 Down / CH -	 Ch -
 Right / Vol +	 Right
 Right / Vol +	 Vol +
 Left / Vol -	 Left
 Left / Vol -	 Vol -
 OK	 Ok
 Exit	 Exit
 FAV	 Pre Ch
 Lang	 Dual
 Pause	 Pause
 TV / AV	 AV
 TV / Rad	 TV/R
 Red / TXT	 Red



**Originale****Sostituto**

 Red / TXT	 Text
 Blue / Audio	 Blue
 Blue / Audio	 +  Shift + Dual
 Green / PIG	 Green
 Yellow / EPG	 Yellow
 Yellow / EPG	 Guide

Originale**Sostituto**

